

- 1) With the spring plate facing upwards...
- 2) ...insert the nut into the T-slot
- 3) ... then press it into the inner slot and move it into the required position


Advantages

- Time and cost savings due to quick assembly
- Can be inserted into existing constructions without disassembly
- Re-positionable / adjustable within an existing structure
- Flexible positioning within the strut (can be slotted in anywhere)
- Easy, vertical assembly through spring plate
- QUICKLY – EASILY – ECONOMICALLY ASSEMBLED!


T-nuts

For Profiles with 6, 8 and 10mm T-Slots


PMK

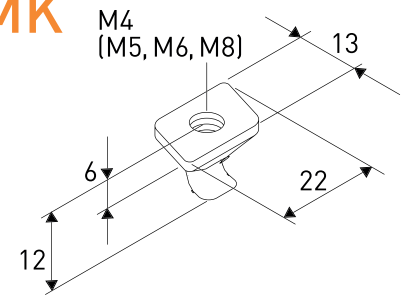

REM

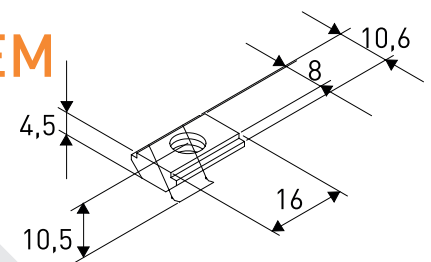

T-NUT 45°

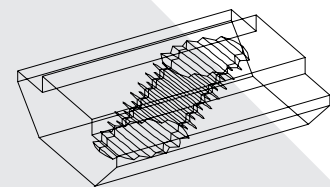

Application

The T-nuts have been designed for profiles with 6, 8 and 10mm T-slots. They are available with M4, M5, M6 and M8 thread and fit almost any profile.

Tools required

- Standard Allen Key